



- NOTE :**
1. Maximum of 4 Diffusers to be connected in total.
 2. Cable lengths specified are typical cable lengths
 3. The Heater can be configured for ON/OFF operation if proportional is not wanted. Type DU7 or DU7H diffuser switching plates are used for with or without heaters.
 4. Return Air inversion of the Diffuser function can be specified from 10 to 22 Deg C is available if a external NTC thermister probe is connected.
 5. If more than 4 diffusers need to be operated from one sensor the sensor slaving cable WBL2 can be connected to a further master controller and 4 diffusers.
 6. Deadband can be specified from 0.2 to 1.0 Deg C . Heating and VAV Differentials can be factory preset to 0.4 to 2.0 Deg C .
 6. BMS protocol must be either BACnet at RS485 level or Johnson Matasys at RS485 level.